



S1 Lite Push Trolley
Instruction Manual

REGISTERONLINE
www.motocaddy.com/warranty

Locating your Serial Number / Attaching the Wheels

Locating your Serial Number

The serial number for the S1 Lite Push Cart is located on the underside of the trolley frame. This number is required when registering your warranty online and should be kept handy for future use.

The same number should also be on the box received with your trolley. Please ensure you keep hold of the packaging in case you need to return your trolley for any reason. A proof of purchase must also be kept in case your trolley requires servicing during its warranty period.

Please keep a record of your trolley serial number here for future reference

M	C	S												
---	---	---	--	--	--	--	--	--	--	--	--	--	--	--

Attaching the Wheels

The Motocaddy S1 Lite has no definitive left or right wheel.

To attach your wheels press the button on the underside of the rear bar (fig. 1) and insert the axle fully. Release the button and pull the wheel out slightly until it clicks.



Fig 1

Unfolding your Trolley

1. Pull the clip to release the locking system (fig. 1)
2. Raise the wishbone to the vertical position (fig. 2)
3. Hook the lower part of the frame into the clip (fig. 3)
4. Simply unfold the upper part of the frame then pull the clip again to lock the upper frame in place (fig. 4)
5. Unfold the upper bag support (fig. 5)



Fig 1

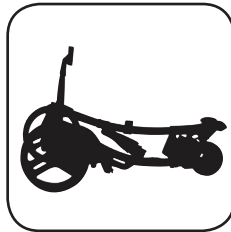


Fig 2



Fig 3



Fig 4



Fig 5

Folding your Trolley

Make sure the upper bag support has been folded up.

Simply pull the clip and fold the main frame in half, fold the wishbone down and pull the clip to lock in place.

Using the Lower Bag Supports

Using the Lower Bag Supports

This Motocaddy trolley is fitted with the new EASILOCK™ bag attachment system.

If you are using an EASILOCK™ compatible cart bag please follow these simple instructions:

1. Remove the two pre-fitted lower bag straps by depressing the rear button and sliding (fig 1)
2. Match up the indicating line on your cart bag with the line on the lower bag support
3. Lower bag until the pins lock in position

If you are using a non-EASILOCK™ bag, please use the following instructions:

1. Stretch the elasticated strap around the bag
2. Loop the rounded bar underneath the hook (fig. 2)
3. Position the two placement straps centrally on your cart bag (fig. 3)

Please ensure the straps are hooked in place securely before releasing.
Failure to do so could result in injury to the user.



Fig 1



Fig 2



Fig 3

Using the Upper Bag Supports

The upper bag support straps can be secured using the same steps as the non-EASILOCK instructions overleaf:

1. Stretch the elasticated strap around the bag
2. Loop the rounded bar underneath the hook (fig. 2 left)
3. Position the two placement straps centrally on your cart bag (fig. 3 left)

Adjusting the Bag Supports

The bag support straps are manufactured from elasticated material to allow your golf bag to be held tightly in place.

The strap should be adjusted to be reasonably tight around the golf bag:

1. Unclip the elasticated straps from the housing by pulling outwards in the direction shown by the arrows (fig. 1)
2. Move the bar as required to tighten or loosen the strap fitting. Pulling the bar downwards will tighten, pushing it upwards will loosen (fig. 2)
3. Ensure that the straps are clipped back in to the housing before use (fig. 3)

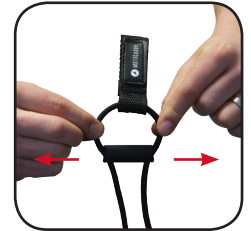


Fig 1



Fig 2



Fig 3

Using the Parking Brake

Using the Parking Brake

The brake on your Motocaddy S1 Lite trolley is designed to be used as a parking brake (like a hand brake of a car or foot brake on a pram).

When applying the brake you should make sure that the trolley has completely stopped moving first.

WARNING: attempting to apply the brake whilst the trolley is still in motion may cause damage to the trolley and could invalidate the warranty.

Always ensure that the parking brake has been disengaged before attempting to set off again.



Adjusting the Front Wheel Alignment if your trolley is veering

In the unlikely event that your trolley is not tracking in a straight line, the alignment of the front wheel can be adjusted to rectify the fault. This problem can be caused by a number of factors including a slightly loose bag support or an unevenly packed golf bag. Should you wish to alter the alignment of the front wheel, follow these simple steps:

1. Lift the quick release lever positioned on the front wheel housing and loosen the wheel nut (fig. 1).
2. There are two small metal dials on either side of the housing that are used to realign the wheel (fig. 2).
3. If your trolley is veering to the right, you will need to turn the left hand dial clockwise and the right hand dial anti-clockwise.
4. If your trolley is veering to the left, you will need to turn the right hand dial clockwise and the left hand dial anti-clockwise.
5. Tighten the wheel nut and push down the lever to lock the wheel back into place. (fig. 3)

This procedure can be carried out until you are happy the trolley is moving in a straight line (please note you may only need to adjust one dial at a time).

These instructions are based on being in front of the trolley looking at the wheel.



Fig 1



Fig 2



Fig 3



Motocaddy Ltd, Units 15 - 18 Stansted Distribution Centre,
Start Hill, Great Hallingbury, Hertfordshire, CM22 7DG

t: +44 (0) 845 058 9818 e: info@motocaddy.com w: www.motocaddy.com



We are dedicated to protecting the environment and encourage the recycling of Motocaddy products through a free collection and disposal service. To find out more or to locate your nearest Motocaddy recycling point, please contact us through our website or by calling 0845 058 9818.

MC.14.16.001