


Advanced Operations




Dynamic Green View

Press the  button to view the Dynamic Green View. The shape of the green will rotate with your angle of approach, showing the real front, center and back distances to the green. The screen also provides the hole number, par information, satellite signal strength, and left/right green information (if available).



1. **08** Hole #
2.  Green View
3. **P4** Par Information
4.  Satellite signal strength
5.  Left Green  Right Green

Shot Distance Measuring Mode

Press the  button to initiate the Distance Measuring feature. Press and hold the  button for 3 seconds to start measuring. Once you have arrived at the desired location, press the  button to finish measuring and you can view the measured distance.



 
Changing Holes





Manual hole selection: Press the  button and the  button at the same time to bring up the hole selection. Then use the   buttons to navigate through the hole numbers. Press  button to select the hole.




Previous hole selection: Press the  and the  buttons at the same time go back to the previously played hole.



Time Setting



Press and hold the  button to see the current time. To change the time, press and hold the  button while you are in the Time Mode. Use the  or  buttons to change to desired hour.

Press the  button to confirm the time. Minutes will be set automatically through the GPS signal once available.

Flip Screen Mode

Press and hold the  and  button at the same time to flip the display screen upside down (180 degrees). Use the same procedure to flip the screen back to its normal view. This feature is for players who want to see the screen while wearing it on a belt, without pulling the device off the belt.





Troubleshooting

An emergency reboot is required if you experience the following:

- Incorrect yardages/distances (check that you have the correct Distance Measurement Mode, Y or M)
- No sound or irregular sounds
- Irregular symbols or stripes on the display

Emergency Reboot

Turn unit off. Connect the USB data cable to your computer. Connect the USB cable to the unit while holding down the  button and the  button at the same time. When the screen starts to blink, release the two buttons. Once you reach SYNC screen, disconnect the USB cable from the unit. Turn on the device.



Note: If issues persist or you need assistance, please contact our Customer Service department at 888.296.1428.

Software Updates

Visit our website www.gpsgolfbuddy.com and download the GB Course Manager to access the latest firmware & course updates for your GolfBuddy VS4.

What's Included :



Golfbuddy VS4



Clip-on Holster



USB Data Cable



Power Adapter



Quick Start Guide

GolfBuddy®

VS4

Quick Start Guide

GolfBuddy[®] VS4



Thank you for choosing GolfBuddy!
The GolfBuddy VS4 is an easy-to-use talking GPS for golfers of all skill levels. It provides you with accurate golf course distance information, via audio or display, to enhance your golfing experience.

Note: Remove sticker from the front screen of the VS4 unit prior to use.

Overview of your GolfBuddy VS4



Screen Description



- 08** Hole No. If there is a left or right green, the letter L or R will appear next to the hole.
- M** Meter. Default distances shown in yards. If switched to meters an "M" icon will appear.
- 189** Distance to the center of the green
- 205** Distance to the back of the green
- 174** Distance to the front of the green
- Battery level indicator

 
Charging the Unit

Connect your GolfBuddy VS4 to a power outlet using the included data cable and the wall charger. You can also charge the unit by connecting the VS4 to your computer's USB port.

Basic Operations

Power On/Off

Once you are at the course, power on the unit and the VS4 will automatically search for the nearest golf course.



Language Selection

Have the unit turned off. While holding down the button, turn on the unit to bring up the language selection menu. Use the buttons to navigate through the language options and press to select.



Voice Information for Distances to the Green

On the Play Mode Screen, press the button and the VS4 will tell you the distance to the center of the green. Press and hold the button for distances to the front and back of the green.



 
Volume Control



Mute/Unmute



Switching to Left/Right Green



Changing the Distance Measurement Mode (Yards/Meters)

